

Instructions for how to use your Landmark PLS

For use with the television:

1) Take out the transmitter



2) Insert the power cord



into the power input of the transmitter (marked POWER on top of the PLS)



3) There is already a wire “whip” antenna plugged into the PLS (in the yellow antenna input of the transmitter marked ANT on top of the PLS). You can also use the metal telescoping antenna that is included.



4) Take your “RCA to RCA” sound cable (it has red & white tips on each end)



Insert one end of the RCA cable into the red & white inputs on the PLS (marked L & R on top of the PLS)



Now insert the other end into the red & white RCA inputs on your Television, these can be found on the front or back of your Television or cable box.

NOTE: Make sure that the inputs say AUDIO OUT



[You can also connect the RCA to RCA cables to your VCR or DVD player's audio output]

Your PLS is now connected

5) Now tune your Orpheus radio receiver to 72.9 and enjoy your favorite program.



If you do not have available RCA inputs:

1) Take out the transmitter



2) Insert the power cord



into the power input of the transmitter (marked POWER on top of the PLS)



3) Take your microphone



and insert it into the input of the PLS marked “mic”

4) Now place your microphone near the speaker of your TV.

5) Tune your Silver radio receiver to 72.9 and enjoy your favorite program.

Notes:

- When using the microphone it is not necessary to use the antenna.
- You can also use your battery pack to make the PLS transportable.

Components:

- PLS Transmitter
- RadioOrpheus receiver
- Earbuds
- Headphones
- Wire & Telescoping antennas
- 12-Volt Power supply
- Battery Pack
- RCA to RCA cable
- RCA to 3.5mm adapter (for plugging the PLS into a headphone jack e.g. on your stereo or computer)
- Microphone

- Slotted screwdriver

Radio Orpheus FM Stereo Receiver instructions

Battery Installation /Battery Change:

Hold the Receiver with both hands , back side up, bottom facing away from you as shown. Using your thumbs, press forward against the ridged areas as indicated in the picture to remove the battery cover. (# 1& 2)

Be sure to install the TWO AAA batteries with the positive side oriented as shown at right. Replace cover before use. (#3)

Using the receiver:

Please take a moment to become familiar with the controls.

LCD display Channel in Mhz, Stereo status,and Lock function. (#4)

On/OFF - Receiver Switch Switch

LOCK- Enable/Disable all other buttons. A key appears in the LCD display when LOCK is engaged. If power is on, it can not be turned off or the channel changed by accident, until LOCK is pressed again, and the key icon shuts off.

HINT Use the lock function before placing the unit in your pocket.

TUNE + and - adjust channel frequency higher or lower. Pressing a TUNE button momentarily moves the frequency up or down .1Mhz. Holding the button for more than one second causes the receiver to begin scanning for the next higher or lower frequency in use in the listening area. This is very helpful for finding an active transmitter when the channel is not known in advance.

VOL - rotate volume knob for more or less headphone volume.

Earhone jack-for stereo headphones in top panel next to volume control.

Stereo/Mono switch - slide switch located on the right side of the case. Can be left in Stereo for LandmarkFM Stereo transmitter or conventional FM broadcast, anywhere in the world. Supports all international Stereo standards.

Switch should be in MONO when used with Williams, Comtec, Telex and other generic ALD systems.

Using Preset buttons M1 - M5. These can be used store 5 different frequencies for instant recall.

SET a preset:

1-tune to the desired channel using the TUNE +/- buttons.

2-press SET momentarily.

3-press the desired memory button (1-5) to store the channel

RECALL a preset:

Simply press the memory button M1 to M5 matching the stored channel to recall.

Note: So long as batteries are replaced within about 30 seconds of removal, stored memory channels are unaffected.

For best results:

1- use high efficiency earphones, keep the cord uncoiled for best reception.


2- Use high quality AAA batteries. You can expect up to 8 hours of listening at high volume when NIMH type rechargeable batteries are unused.

DO NOT STORE UNIT WITH DISCHARGED BATTERIES INSTALLED AS LEAKAGE OR DAMAGE NOT COVERED BY WARRANTY MAY RESULT

3- Turn off receiver when not in use.

4- When used with generic wideband ALD transmitters , refer to the following list of Channel code to frequency conversion.

© Landmarkfm 2004 visit us on the web at www.landmarkfm.com

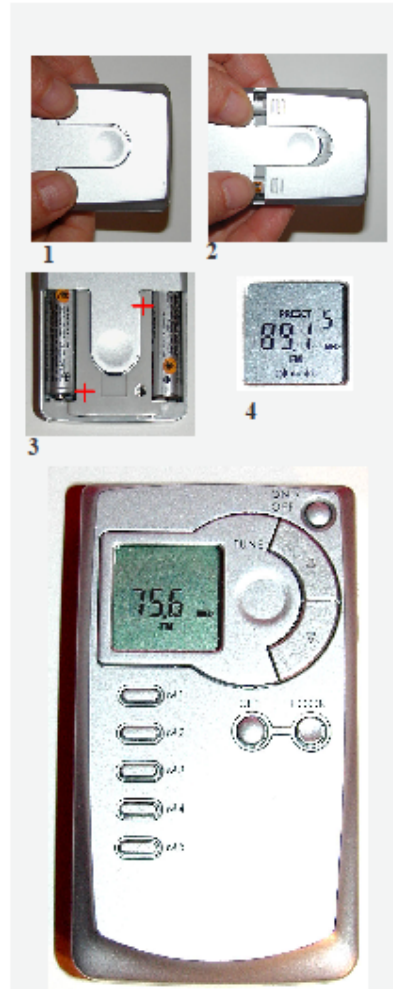

Frequency (MHz)	Telex	Phonix	Ear	Comtek	Williams	Telex	Genetic
72.1	A	A	A	A	TS	A	2
72.3	L					U	4
72.3	R	H	H	H	H	C	4
72.4	V					D	8
72.5	C	U	U	U	SS	L	10
72.6	O					E	12
72.7	D	D	Y	D	SR	G	14
72.8	P					H	16
72.9	L	B	L	B	SS	L	10
74.7	T	T	T	T	T	Q	21
75.1	J	J	T	J	AS	P	21
75.4	IL					Q	26
75.5	L	B	B	B	AS	J	28
75.6	R					K	28
75.7	G	H	H	H	SA	L	22
75.8	L					M	24
75.9	H	H	Y	H	SR	V	26

LIMITED WARRANTY

Landmark Audio Technologies warrants this Product (including any accessories) against defects in material or workmanship as follows:

1. **LABOR:** For a period of five (5) year from the date of purchase, if this Product is determined to be defective, Landmark Audio Technologies will repair or replace any transmitter or receiver, at its option, at no charge. Customer has to pay for shipping. After the Warranty Period, you must pay for all labor charges.
2. **PARTS:** In addition, Landmark Audio Technologies will supply, at no charge, new or rebuilt replacements in exchange for defective parts for a period of five (5) years. After the warranty period, you must pay for all parts costs.
3. **LIFETIME REPLACEMENT POLICY FOR RADIOOPHEUS RECEIVERS.** In the event of damage or destruction outside the parameters of the limited warranty, Landmark Audio will replace the Receiver for a flat fee (currently set at \$19.50 plus shipping)
4. **MONEY BACK GUARANTEE:** For a period of thirty (30) days from the date of purchase on all Products and accessories that came with your package.

To obtain warranty service, ship the Product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to our office at 159 Jay St. Albany, NY 12210.

This warranty does not cover customer instruction, installation, set up adjustments or signal reception problems.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product, including the antenna. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Landmark Audio Technologies to service the Product. This warranty does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries).

Proof of purchase in the form of a bill of sale, invoice number or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

This warranty is not transferable, only person who can exercise this warranty is the original purchaser.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. LANDMARK AUDIO TECHNOLOGIES SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

For your convenience, Landmark Audio Technologies has a telephone number as well as a website for frequently asked questions:

Landmark Audio Technologies
1-888-677-4387
www.landmarkfm.com

